

Link
tech

PREMIUM
VIP PRODUCT

Hello!

Model: LPH-TW39 True Wireless Earbuds User Manual

Please carefully read this Manual before using this Product for the very first time and well keep it for further reference.

Dear Customer

Thank you for choosing LinkTech's products, we appreciate your choice to purchase this product and we're hoping that you'll have a great time using our product.

Please share your experience with our products through LinkTech's customer services center either by phone, Whatsapp or Bip.

Feel free to express your opinions or tell us your suggestions on our channels. LinkTech will happily review all your invaluable feedback in order to improve our products and services.

If you encounter any problem or have difficulties with this product, please refer to the User's Manual, you can contact our customer services if you have any further questions.

LinkTech considers your priceless recognition and support as an encouragement to stay focused on providing high quality products and a motivation to move forward, improve our services and expand our workspace in the future.

LinkTech's Sales Team

True Wireless Earbuds



ENC | 4 Microphones
for clearer calls

TW39 blends premium sound quality with a stylish casing, minimalist design, advanced touch controls, and IPX4 water resistance for a versatile audio experience with a style



User's Manual

We recommend using the cable that was included in the package to charge the earphones

Contents List



User's Manual/ Warranty Card (1PCS)



USB-A to USB Type-C
Charging Cable (1PCS)



Charging Case
(1 PCS)



TWS Earbuds
(2 PCS)

Product Characteristics and Features

- IPX4 water resistance
- A stylish and very comfortable in-ear design with ergonomic touch control
- Compact and nice charging case with 650mAh battery and ASAP charging feature, for longer playing rime and lesser charging time.
- Large 13mm dynamic drivers optimized to deliver a rich and deep bass sound
- Smart touch controls, to control your music and calls with a tap of a finger.
- Environmental Noise Cancellation (ENC): enhances voice clarity during calls by reducing background noise with embedded quad mic
- Bluetooth v5.4 Wireless Technology support, with TWS feature to connect two devices at the same time
- Game Mode Support, allows you to have lower latency for smoother experience.

Safe Use Information

Read the instructions carefully before use, appearance and specifications of the device may be resized and different from the image in this manual without prior notice.

- ⚠ Do not listen to music at maximum volume for long periods of time as this can damage your hearing.
- ⚠ Consult a physician regarding the use of this device with medical equipment, or consult a medical device manufacturer for this matter
- ⚠ Use only certified wall chargers.

Product Specifications

Bluetooth Chipset IC	JL7003D8
Bluetooth Version	V5.4 with TWS feature
Bluetooth Protocol	HFP, A2DP, HSP, AVRCP, AVCTP, AVDTP, SPP, SMP, ATT, GAP, GATT, RFCOMM, SDP, L2CAP
Transmission Distance	Approximately 10m
Frequency Response	20Hz – 20KHz
Microphone	Quad Mic with ENC support
Audio Drivers	Φ13mm Dynamic
Impedance	16Ω
Earbuds Playing Time	Up to 6.0 Hours at 60% volume
Earbuds Talking Time	Up to 5.5 Hours at 60% volume
Water Resistance Level	IPX4
Charging Features	3C Fast Charging
Charging Port	USB Type-C
Charging Input	DC 5V / 1A
Charging Time	~ 2 Hours
Earbuds Charging time	~ 30 Minutes
Battery Type	Li-ion Polymer
Charging Case's Battery	3.7V / 650mAh
Earbuds' Battery	2X 40mAh
No of Charging Time	4 – 5 times



Do not do the following with the device and battery

- Do not disassemble it on your own
- Do not repair it on your own
- Do not try to modify it
- Do not overheat the battery
- Do not expose it to direct sunlight
- DO not immerse it in water
- Keep it away from sources of fire or open flame
- Do not expose this product to very low or very high temperatures, below 0°C or above 45°C
- Contact an authorized service technician.



Do not use this product during a thunderstorm, there is a risk of electric shock or device malfunction.



The metal contacts of the headphones and charging case must be free of dirt and not covered by foreign objects.



Do not use this device in places with strong exposure to an electromagnetic field, this can lead to incorrect operation or damage the device.

Quick Start Guide

1. Before using the device, remove the earbuds from the case and remove the protective film from the charging contacts of the earbuds.
2. Fully charge the case along with the headphones, use the supplied cable (power adapter is not included).
3. This case has a Notification LED to indicate the charging status as follows:
 - Flashing White LED = the case is recharging
 - Solid White LED = the case is fully charged
4. Each earbud has a Notification LED that shines in Solid Red colour when the earbud is recharging.

Power On

- Simple open the lid of charging case (When earbuds are inside). The earbuds will power on automatically.
- If the earbud is outside the charging case, press and hold the earbud's touch control for 3 seconds to power on manually.

Power Off

- Remove both earbuds from your ears, and place them back into the charging case in the correct orientation then close the lid.
- Earbuds will automatically switch off (and enter into charging mode).
- Earbuds will automatically power off if they're not connected to any device for more than 3 minutes

Power Off

- If the earbud is outside the charging case, press and hold the earbud's touch control for 5 seconds to power off manually.

To Pair with Phone and Devices

When earbuds are powered on, it will automatically enter pairing mode, the notification LED of the left earbud will flash Red and White, the notification LED of the right earbud will blink once in every 5 seconds.

- Open Bluetooth on your device and search for "Link-TW39" in the list of available devices.
- Select "Link-TW39" from the list.
- TW39 Earbuds are now paired with your device and ready to use, the notification LED of both earbuds will be light off once connected.

Note: These earbuds will automatically connect to the last paired device as soon as you open the lid of the charging case.

Earbuds Touch Controls

Play / Pause	Tap either earbud once	1x Tap Left / Right
Previous Track	Tap the left earbud twice	2x Tap Left
Next Track	Tap the right earbud twice	2x Tap Right
Volume Down	Tap the left earbud thrice	3x Tap Left
Volume Up	Tap the right earbud thrice	3x Tap Right
Answer Call	When ringing, Tap either earbud once	1x Tap Left / Right
End Call	When calling, Tap either earbud twice	2x Tap Left / Right
Reject Call	When ringing, Tap either earbud twice	2x Tap Left / Right
Voice Assistant	Touch and hold either earbud for 3 seconds	
Game Mode	Touch either earbud four times	

To Reset Earbuds

- Make sure your earbuds are fully charged.
- Take out the earbuds from charging case.
- Tap either earbud 5 times.
- The notification LED of earbuds will flash white light 3 times and a voice prompt "beep" will be heard to indicate earbuds have been reset
- Place the buds inside the charging case and repeat the pairing process.

Before that, remove Link-TW39 from the list of paired Bluetooth devices on your phone.

