



USER MANUAL
Wireless Speaker
LPS-R110

Hello!

Please carefully read this Manual before using this Product for the very first time and well keep it for further reference.

Dear Link Tech User,

Thank you for choosing Link Tech product. Your choice is crucial for us, which means Link Tech has added a new user. Hope that we will bring you a good experience through our products and services. Also hope you will put forward the good advice and suggestions by official customer hotline, Whatsapp and BIP in the process of product experience, which can help Link Tech to constantly improve product and service.

If you encounter any problems in the using product, please refer to service process. Your support is our strongest power, also your recognition and evaluation are a great encouragement to Link Tech. Thank you!

Link Tech sales team

Portable Wireless Speaker

LPS-R110



Technical Specifications:

Wireless Standard: 5.0

Transmission distance: 10 meters

Output power: 10W2

Play time: 4-6H

Frequency effect: 100Hz-LOKHz

Speaker: 66mm*2.40 10W

Input Power: 5V===2A


Maximum current consumption: 1A

Battery type: 18650 Li-Ion 3000mAh

Audio signal input interface:
standard 3.5mm headphone jack (stereo)

Features:

1. Wireless connection
2. Memory function
3. Support U disk/ TF card/ AUX play mode
4. Built-in lithium battery
5. Hands-free function
6. Support MP3/WAV/WMA/FLAC/APE music format decoding
7. Use high-fidelity speakers, make the sound more natural and delicate .
8. 1+1 serial function .
9. Water resistance IPX6 .
10. FM function .

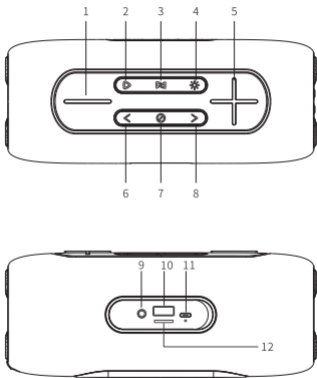

Button instruction:

1. Volume
2. Play/Pause button:
short press: play/pause;
double-click: call back function under the wireless mode;
short press to answer/ hang up the phone, long press
2 seconds to reject the call under the call mode;
long press to exit wireless connect.
long press to search the programm in the FM mode.
3. Mode button:
Short press: switch function; long press: series function.
4. Light button
click to switch the light, long press to turn on/off the light.
5. Volume+
6. Previous song: In FM mode, short press to the previous channel.
7. Power button
long press turn on/off for about 3 seconds/times.
8. Next song: In FM mode, short press to the next channel.
9. AUX interface
10. USB interface
when inserted into the U disk, the default U disk playback
11. Type-C interface when inserted into the Type-C data
data cable defaults to charging the device.
12. TF card interface
when inserted TF card default TF card playback.

Directions for use:

1. Device to connect
 - 1.1 Turn on the device to default wireless mode.
 - 1.2 Turn on wireless device, search model Linktech R110 and connect, play music after connection successfully .
2. Suitable for all kinds of mobile phones equipped with wireless technology, wireless adapter, wireless players .
3. Voice prompt
 - 3.1 there is a voice prompt when turn on/off
 - 3.2 Low-power voice prompt 3 times, shutdown after 15
 - 3.3 there is voice prompt when the button to the maximum volume, no voice prompt at the minimum volume.
4. Mode switching
 - 4.1 enter into wireless by default when starting-up, switching sequence is as follows:
wireless mode-radio mode -TF card mode - USB mode
- AUX mode.
 - 4.2 mode: post-insertion priority .
5. LED light
Wireless search status: white light flash, about 0.5 seconds a time; wireless matching status: white light always on play status, white light flash slowly about 15 seconds a time; starting-up status: red light slow flash prompt when the power is less than 30%, about 15 seconds a time; red light is always lighting when it is charging the light will turn off when the power is full.

6. volume the default volume of speaker is 70% when starting-up.
7. Charging to use
The machine built overcharge protection circuit, can be connected to a computer or charger for a long time, about four hours to fully charge. Every battery playback time will be different due to the use of different size of the volume.
8. No working status, automatic shutdown after 15 minutes,

Troubleshooting:

1. Auto power off the battery protection is automatically activated when the battery is low, please use it after charging for 5 hours
2. Cannot play music themusic file storage path cannot be recognized, save file and store in the root directory of the removable device
3. Connect the computer no sound: computer interface connection error, please select the correct audio output Port
4. No function or function keys wrong: try again after shutdown.
5. The machine provides a reset button -AUX interface. When it is abnormal, please press the hole with a slender stick.