Hello!

MODEL: LPS-M406
PREMIUM WIRELESS SPEAKER
USER MANUAL

Dear Customer

Thank you for choosing LinkTech's products, we appreciate your choice to purchase this product and we're hoping that you'll have a great time using our product.

Please share your experience with our products through LinkTech's customer services center either by phone, Whatsapp or Bip.

Feel free to express your opinions or tell us your suggestions on our channels. LinkTech will happily review all your invaluable feedback in order to improve our products and services.

If you encounter any problem or have difficulties with this product, please refer to the User's Manual, you can contact our customer services if you have any further questions.

LinkTech considers your priceless recognition and support as an encouragement to stay focused on providing high quality products and a motivation to move forward, improve our services and expand our workspace in the future.

LinkTech's Sales Team

PREMIUM WIRELESS KARAOKE SPEAKER

Features

- 2.1 CH 80W Karaoke party speaker with ambient RGB lights.
- IPX4 Water Resistant
- With voice (Google, Siri) assistant.
- Wireless version 5.3, with TWS function, support connection of two speakers simultaneously for a stereo effect
- Supports wireless music, USB-flash, microphone and Aux-in ect. multiple-play.
- With Type-C charging port.Support fast charge.
- Comes with a ABS Stable handle, easy to take out anywhere.
- Wrapped with fancy fabric material, keeps up with outdoor trends.
- 5 colors ambiance lights that beat with rhythm.
- Built-in lithium rechargeable batter 4400mAh 50% volume 8 hours playback time.

Package Contents
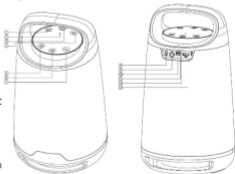

Portable
Bluetooth Speaker

Type-C
Charging Cable

User
Manual

Specification

Model	LPS-M406
Bluetooth Version	V5.3
Subwoofer Size	5.25 inch
Tweeter Size	2.75inch x 2
RMS Power	80W
Max Power	160W
Battery	7.4V 4400 mAh
Product size	190x190x332mm
Frequency Response	100HZ-20KHZ
Connection Range	10m

Instruction For Appearance And Key

❶ RGB Light Button

❷ Hands-free call received port

❸ Power Button

❹ Mode/TWS Button

❺ Forward/Volume Up

❻ Play/Pause

❼ Backward/Volume Do

❽ AUX Port

❾ MIC Port

❿ Type-C Charging Jack

⓫ Reset port

⓬ Charging/BT Indicator

⓭ USB Port

Power On/Off

Long-press the Power button to turn the speaker on and off.

Bluetooth

- Long-press power button to turn the speaker. The speaker enters Bluetooth mode automatically.
- Activate Bluetooth of mobile phone and search for device name "Link-M406" then connect it.
- Play the music from your mobile phone and enjoy.
- Long-press Forward or Backward button to select songs.
- Short-press Forward or Backward button to adjust volume up and down.
- Short-press Play/Pause button to play/pause the music.
- Short-press the power button to disconnects the connected Bluetooth.

TWS Function

- Turn on two identical speakers you want to pair, both under BT mode. Only need to set one of the two units.
- Long-press the M button to pair, speaker will make a tone to start to pair, and make a tone again after paired successfully.
- Make Bluetooth connection with your mobile phone to play music by the two paired Speakers.
- Long-press the M button again to exit TWS function.

Playing Music From USB Disk

- Long-press power button to turn the speaker.
- Insert USB flash disk into slot, the speaker will play the stored music automatically.
- Long-press Forward or Backward button to select songs you like, short-press to adjust the volume up and down.
- Short-press Play/Pause to play or pause.

  Notes: Under any playing mode, when you insert a USB disk to the speaker, it will switch to play the USB disk.

RGB Light

The RGB light is on when speaker powered on, user can short-press the RGB Light button to turn the 5 different light modes, Long-press RGB Light button to Off light

Activating Voice Assistant:

- Make Bluetooth connection with your mobile phone.
- Long-press Play/Pause button to activate voice assistant.
- Make Bluetooth connection with your mobile phone.
- Long-press Play/Pause button to activate voice assistant.

How to charge

Hands-free call:

- Under Bluetooth connection status, if there is an incoming call, user can short-press Play/Pause button to accept the call or long-press Play/Pause button to reject the call.
- During the call, user can long-press Play/Pause button to switch to talking on the phone.
- Short-press Play/Pause button or operate on mobile phone to end the call.
- Double click the Play/Pause button to call back.

More Remarks:

- Default volume is at 50% status of max volume.
- Play time may vary depending on volume level and music style.

How to charge:

• The charger is not included in the package, please charge this speaker via a standard 5V/2A & 9V/2A charger or via a PC.

• Charge time should be 3-5 hours. Once the speaker is full charged, the charging indicator will be off.

• The unit does not have power bank function, it is forbidden to charge other device via this unit or to connect other device via the USB port.

• To protect the battery, please do not use the speaker while it is charging.

Warning:

• Don't use/store this speaker in extreme temperatures.

• Please store it in cool and dry area, keep away from anything that generates heat, such as radiators, stoves, etc.

• In order to have hearing protection and an extended speaker life, avoid listening to songs on maximum volume.

• When cleaning this speaker, use a soft dry cloth. For more sever stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.